
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Red / Zoom		Red
	Green / SAT		Green
	Yellow / Pause		Yellow
	Blue / TV/RD		Blue
	Blue / TV/RD		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

 	SUBTL		Subt
	FAV		Pre Ch
	Recall		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Rec		Rec
	Pag +		Ch +
	Pag -		Ch -
	Info		Info
	EPG		Guide



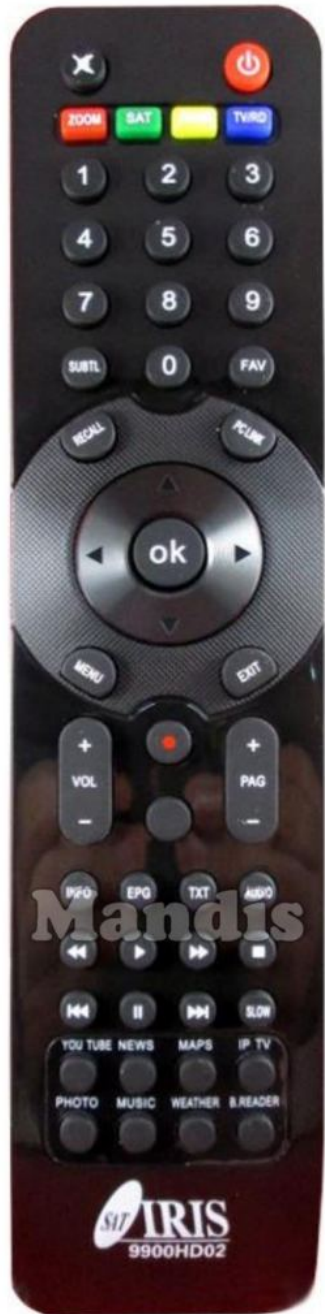

Originalfernbedienung    Ersatzfernbedienung

	TXT		Text
	Audio		Dual
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Slow	+	Shift + Right

Originalfernbedienung    Ersatzfernbedienung