

 

 


 


 

 

 
 
 


 

 



 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		CD F.FWD	
Mute		Funct./Direct	
Every Pop		CD Pause	
Tape 1 Stop		Woofer/Speed	
Tape 1 Preset		Volume+	
Vol Rs-/Effect		Next/Prog+	
Sleep		Volume-	
Preset Pause		Tape 1 Hall/Ats	
CD Random		Prev./Prog-	
Tape 2 Pre./eq		Mode	
Vol Rs+/S.Mode		Program	
Input/Source		Tape 1 Rec	
CD/Theater		Tape 1 F.FWD	
CD Play		Tape 1 Rew	
Display		Tape 1 Play	
CD Rewind			
Stop	