



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX		Text
	SUB		Subt
	Menu		Menu
	Exit		Exit
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	PG-		Ch -
	PG+		Ch +
	TV/R		TV/R
	LAST		Back
	Info		Info
	Mode		Smart
	Audio		Dual
	EPG		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	White		Pre Ch

