


 
 


 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	BD		Shift + 5
	DVD		Shift + 2
	DVR / BDR		Shift + 7
	HDMI		Shift + 0
	TV		Shift + 1
	CD		Shift + 3
	NET		Shift + 9
	ADPT		Shift + Guide / EPG / -/-
	iPod / USB		Shift + 8
	SAT / CBL		Shift + Fav / Marker / PC
	MHL		Shift + 4
	TUNER		Shift + 6
	Input Select ↶		CH- / Page-
	Input Select ↷		CH+ / Page+
	i / Status		Info / Angle
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Up		Up
	Video		Picture / Format
	Tools Menu		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Home Menu		Menu / Home
	iPod Ctrl.		D.Menu / Top
	Down		Down
	Return		Back / Return
	Features PHASE		Red / Netflix / Search
	Features ECO		Yellow / YouTube / Repeat
	MPX		Shift + Pause / Step /
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	BAND		Shift + Play /
	Play		Play / Slow
	PTY		Shift + Stop /
	Stop		Stop / Hold
	Preset -		Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+		Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-		Shift + << /
	<<		<< / Tune-
	Tune+		Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers		Shift + Audio / Lang I/II
	Dimmer		Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat


 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	BD		Shift + 5
	DVD		Shift + 2
	DVR / BDR		Shift + 7
	HDMI		Shift + 0
	TV		Shift + 1
	CD		Shift + 3
	NET		Shift + 9
	ADPT		Shift + Guide / EPG / -/-
	iPod / USB		Shift + 8
	SAT / CBL		Shift + Fav / Marker / PC
	MHL		Shift + 4
	TUNER		Shift + 6
	Input Select ↻		CH- / Page-
	Input Select ↻		CH+ / Page+
	i / Status		Info / Angle
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Up		Up
	Video		Picture / Format
	Tools Menu		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Home Menu		Menu / Home
	iPod Ctrl.		D.Menu / Top
	Down		Down
	Return		Back / Return
	Features PHASE		Red / Netflix / Search
	Features ECO		Yellow / YouTube / Repeat
	MPX		Shift + Pause / Step / Freeze
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	BAND		Shift + Play /
	Play		Play / Slow
	PTY		Shift + Stop /
	Stop		Stop / Hold
	Preset -		Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+		Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-		Shift + << /
	<<		<< / Tune-
	Tune+		Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers		Shift + Audio / Lang I/II
	Dimmer		Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat



