


**Originalfernbedienung    Ersatzfernbedienung**

	Standby / On		Power
	Mute		Mute
	Display		Info
	Open / Close		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / DVD		TV/R
	CL		Shift + Exit
	DVD / HDD		Media

**Originalfernbedienung    Ersatzfernbedienung**

	Source		AV
	Hide		D. Menu
	TV Mode		Shift + TV/R
	Audio		Dual
	Subtitle		Subt
	Zoom		Eject
	Angle		Format
	Rec		Rec
	Rec Mode		Shift + Rec
	Edit		Guide
	Timeshift		Sleep
	Channel-		Ch -
	Channel+		Ch +
	Title		Smart
	Menu		Menu
	Up		Up
	Left		Left



