

 


 






 

 
 

 
 
 

 
 


 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Zoom		Eject
	Subt		Subt
	Audio		Dual
	Rec		Rec
	--		Shift + Guide
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Menu		Menu
	FAV		Pre Ch
	Up / PR+		Up
	Down / PR-		Down
	Right / Vol+		Right
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Page+		Ch +





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PAGE -	Page-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
RECALL	Recall	RETURN BACK	Back
TV/RADIO	TV / Radio	SEARCH TV/R	TV/R

