


 







 







 

 




 




 

 


 











 



 



 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Mute |  | Mute |
|  | Pause |  | Pause |
|  | Recall |  | Back |
|  | Menu |  | Menu |
|  | Red / Sleep |  | Red |
|  | Red / Sleep |  | Shift + Power |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Green / List |  | Green |
|  | Green / List |  | List |
|  | Yellow / << |  | Yellow |
|  | Yellow / << |  | << |
|  | Blue / >> |  | Blue |
|  | Blue / >> |  | >> |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | 9PIC |  | Media |
|  | Audio |  | Dual |
|  | TV / Radio |  | TV/R |
|  | TV / VCR |  | AV |
|  | N / P |  | 3D |



