


 



 
 




 

 
 

 


 
 
 


 
 

 


 



Originalfernbedienung Ersatzfernbedienung




 






 

 

 
 
 
 

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Last		Back
	TV / R		TV/R
	Exit		Exit
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	SUB-T		Subt
	Info		Info
	Text		Text
	Audio		Dual
	EPG		Guide
	Favor		Pre Ch
	Red / I<<		Red
	Red / I<<		I<<
	Green / <<		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green / <<		<<				
	Yellow / >>		Yellow				
	Yellow / >>		>>				
	Blue / >>		Blue				
	Blue / >>		>>				
	USB		Media				
	Mode		Smart				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				

