


 







 







 

 



 

 
 
 

 


 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject iPod	 + 	Shift + Pre Ch
	Eject CD		Pre Ch
	Sleep		Sleep
	Timer/Play		Blue
	Clock/Timer	 + 	Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	Del		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Program	 + 	Shift + Sleep
	Repeat		Text
	Play Mode	 + 	Shift + Play
	Radio		TV/R
	AUX		AV
	Play/Pause CD		Play
	Play/Pause iPod		Pause
	>>/>>I		>>
	<</I<<		<<
	Stop		Stop
	Re-Master		Smart
	D.Bass		Media
	Display/Dimmer		Info





**Originalfernbedienung    Ersatzfernbedienung**

	Surround		Dual
	Preset EQ		Format
	iPod Menu		Menu
	Bass/Treble		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Auto Off		Exit
	Tune Mode		Subt
	FM Mode		List
	Input Level		Options

**Originalfernbedienung    Ersatzfernbedienung**