


 

 



 

 

 
 
 



 
 
 

 


 
 
 



 





**Originalfernbedienung    Ersatzfernbedienung**

	POWER - ON		Power
	POWER - OFF		Shift + Power
	ASPECT		Eco / Aspect
	HDMI		Source
	PC / COMPUTER		Shift + Source
	A. P. / AUTO POS.		Auto
	COMP. /		Comp / Video
	S-VIDEO		Mode
	Up		Up
	AV MEMORY - 1		Vol + / Page +
	AV MEMORY - 2		+ / Play
	AV MEMORY - 3		Volt / Focus
	Left		Left
	Enter		Enter
	VIDEO		Shift + Comp / Video
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	MENU		Menu
	BRT. /		Shift + Freeze / Timer
	C. T. / COLOR		- / Stop
	SHARP. /		Freeze / Timer
	CNT. /		Help / Info
	COLOR		Blank / Mute
	GAMMA		3D / Invert

