




 


 
 




 

 

 

 

 

 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	On Screen		Display / Media
	1		1
	Repeat		Green / APP / Repeat
	2		2
	Program		TV/Radio /
	3		3
	Sleep		Sleep / Timer
	Surround		Shift + Eject / Surround
	4		4
	Sound		Sound / Title
	5		5
	Zoom		Zoom / Size
	6		6
	Aspect		Shift + Picture / Format
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Color Mode		Picture / Format
	Break		Text / Goto
	Play		Play / Slow
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Keystone Up		CH+ / Page+
	Visual Setup		Fav / Marker / PC
	Vol+		Vol+
	Keystone Down		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	O)))/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Camera/Angle		Info / Angle
	Image On/Off		Smart / List

Originalfernbedienung	Ersatzfernbedienung

