
 








Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Freeze		Shift + Pause / Step /
	0		0
	Aspect Ratio		D.Menu / Top
	Guide		Guide / EPG / -/--
	?		Shift + Info / Angle
	TXT		Text / Goto








 
 
 


 












 
 
Originalfernbedienung Ersatzfernbedienung

	OPT		Setup / OPT /
	Back		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	↑ Page+		Shift + Up
	CH+		CH+ / Page+
	Vol-		Vol-
	↓ Page-		Shift + Down
	CH-		CH- / Page-
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV/R		TV/Radio /
	SUB		Subtitle / EQ
	LANG		Audio / Lang I/II
	⏰		Sleep / Timer
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	<		<< / Preset-
	>		>> / Preset+
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

