



 











 

 

 



 





 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------------|
|  | Power |  | Power |
|  | Up / P+ |  | Up |
|  | Up / P+ |  | CH+ / Page+ |
|  | Menu |  | Menu / Home |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Down / P- |  | Down |
|  | Down / P- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | -- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | P < P |  | Fav / Marker / PC |
|  | PP |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | I-II |  | Audio / Lang I/II |
|  | Mute |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Info |  | Info / Angle |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [TV] |  | Shift + 1 |
|  | [TV] |  | TV/Radio / |
|  | [AV] |  | AV / Input / RDS |
|  | [≡] |  | Text / Goto |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|-----------------------|
| | [≡⊕] | | Subtitle / EQ |
| | [/ ≡] | | Picture / Format |
| | [≡X] | | Exit / Cancel / Clear |
| | [≡↓] | | Zoom / Size |
| | [≡?] | | Display / Media |
| | [≡i] | | Smart / List |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







 

 
 




 























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------------|
|  | Power |  | Power |
|  | Up / P+ |  | Up |
|  | Up / P+ |  | CH+ / Page+ |
|  | Menu |  | Menu / Home |
|  | Left |  | Left |
|  | Select |  | OK |
|  | Right |  | Right |
|  | Down / P- |  | CH- / Page- |
|  | Down / P- |  | Down |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | 9 |  | 9 |
|  | +10 |  | Guide / EPG / -/- |
|  | 0 |  | 0 |
|  | Repeat |  | Green / APP / Repeat |
|  | Search |  | Red / Netflix / Search |
|  | A→B |  | Yellow / YouTube / Repeat |
|  | Display |  | Display / Media |
|  | Audio |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Zoom |  | Zoom / Size |
|  | Prog |  | TV/Radio / |
|  | C |  | Blue / Prime Video / Random |
|  | Angle |  | Info / Angle |
|  | Return |  | Back / Return |
|  | Time |  | Sleep / Timer |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-----------------------|
| | | | << / Preset- |
| | | | >> / Preset+ |
| | | | Play / Slow |
| | | | Pause / Step / Freeze |
| | | | Stop / Hold |
| | Title | | Sound / Title |
| | Open / Close | | Eject / Surround |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |






















Originalfernbedienung Ersatzfernbedienung

| | | |
|-------------|---|-------------------|
| On/Off |  | Power |
| Mute |  | Mute / Dimmer |
| Txt Stop |  | Stop / Hold |
| Tone+ |  | >> / Tune+ |
| Lang |  | Sound / Title |
| Menu audio |  | Audio / Lang / II |
| Subt.List |  | Subtitle / EQ |
| Txt Expand |  | Zoom / Size |
| Sleep Timer |  | Sleep / Timer |
| Return TV |  | TV/Radio / |
| Menu video |  | D.Menu / Top |
| Text |  | Text / Goto |
| Menu |  | Menu / Home |
| Menu Up |  | Up |
| Info |  | Info / Angle |
| Menu Left |  | Left |
| OK Enter |  | OK |









Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-----------------|
| Menu Right |  | Right |
| Menu Down |  | Down |
| Back |  | Back / Return |
| Volume+ |  | Vol+ |
| Chan.Up |  | CH+ / Page+ |
| Volume- |  | Vol- |
| Display |  | Display / Media |
| Chan.Down |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |





Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|-----------------------------|
| Guide -/-- 1. |  | Guide / EPG / -/-- |
| 0/10 |  | 0 |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Lang |  | Shift + Audio / Lang I/II |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Originalfernbedienung Ersatzfernbedienung

| | | |
|--|--|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

