


 

 
 
 
 
 

 



 
 
 
 
 

 

 
 
 


 
 






 



 
 
 

 
 
 

 



 
 









 
 

 





Originalfernbedienung Ersatzfernbedienung

 

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	TV / DTV		Smart
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Guide		Guide
	Back		Back
	P-		Ch -
	P+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	OO		Shift + Dual
	TV / Radio		TV/R





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Colour System	 Options		
 Sleep Timer	 Sleep		
 [...] Subt	 Subt		
 Zoom	 Eject		
 [=] Text	 Text		
 [=i] List	 List		
 [?] D. Menu	 D. Menu		
 [↕] Format	 Format		
 [⊖] Shift + Subt	 Shift + Subt		





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec / Top Menu		Rec
	↑		Ch +
	↓		Ch -

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power	Power		
<<	<<		
Play	Play		
>>	>>		
Rec	Rec		
Pause	Pause		
Stop	Stop		
Up	Ch +		
Down	Ch -		

