









 
 


 



 


 
 
 
 
 
 




 






 




 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Eject		Eject
	Power Off	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Time	 + 	Shift + AV
	Check		Media
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Previous		l<<
	Next		>>l
	Search+		Right
	Search-		Left
	Display	 + 	Shift + Info
	10+		Vol +
	10-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	Folder+		Ch +
	Folder-		Ch -
	Repeat		Text
	Random		TV/R
	A-B		Options
	Program		Sleep
	Source		AV

