


 





Originalfernbedienung Ersatzfernbedienung

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | Power  |    | Power                       |
|    | 1      |    | 1                           |
|    | 2      |    | 2                           |
|    | 3      |    | 3                           |
|    | 4      |    | 4                           |
|    | 5      |    | 5                           |
|    | 6      |    | 6                           |
|    | 7      |    | 7                           |
|    | 8      |    | 8                           |
|    | 9      |    | 9                           |
|   | FAV    |   | Fav / Marker / PC           |
|  | 0      |  | 0                           |
|  | TXT    |  | Text / Goto                 |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                       |
|---|--------|---|-----------------------|
|    | Exit   |    | Exit / Cancel / Clear |
|    | ?      |    | D.Menu / Top          |
|    | @      |    | Smart / List          |
|    | Menu   |    | Menu / Home           |
|    | Up     |    | Up                    |
|    | Back   |    | Back / Return         |
|    | Left   |    | Left                  |
|    | OK     |    | OK                    |
|    | Right  |    | Right                 |
|    | Tools  |    | Setup / OPT /         |
|   | Down   |   | Down                  |
|  | Guide  |  | Guide / EPG / -/-     |
|  | Vol+   |  | Vol+                  |
|  | Source |  | AV / Input / RDS      |
|  | P+     |  | CH+ / Page+           |
|  | Vol-   |  | Vol-                  |
|  | Mute   |  | Mute / Dimmer         |





Originalfernbedienung    Ersatzfernbedienung

|  |          |   |                         |
|--|----------|---|-------------------------|
|  | P-       |   | CH- / Page-             |
|  | I<       |   | I<< / Preset-           |
|  | >I       |   | >>I / Preset+           |
|  | <<       |   | << / Tune-              |
|  | >>       |   | >> / Tune+              |
|  | Rec      |   | Rec / Rec Mode          |
|  | Play     |   | Play / Slow             |
|  | Pause    |   | Pause / Step / Freeze   |
|  | Stop     |   | Stop / Hold             |
|  | 3D       |   | Picture / Format        |
|  | ..0      |   | Zoom / Size             |
|  | [...].   |   | Subtitle / EQ           |
|  | Netflix  | + | Shift + Red / Netflix / |
|  | My Media |   | Display / Media         |
|  |          |   |                         |
|  |          |   |                         |
|  |          |   |                         |

Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

