






 





 



 












 

 
 











 



 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	F		Menu
	Preset/Folder Up		Ch +
	Preset/Folder		Ch -
	Jukebox/Memor		Smart
	Auto Dj		Options
	Delete		Exit
	Repeat		Text
	>>I		>>I
	Tuning+		Right
	Tuning-		Left
	I<<		I<<
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	Sound Effect		Dual
	Region EQ		TV/R
	Info/Sleep		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clock		Shift + AV
	Alarm		Media



