



 
 
 
 
 
 
 

 





 

 
 

 

 



 








Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	Tv/Radio		TV/R
	Mute		Mute
	HDMI		Smart
	USB		Media
	FAV		Pre Ch
	EPG		Guide
	Title		Info
	Rec		Rec
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Goto		Options
	OSD		3D
	Menu		Menu
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause









Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	I <<		I <<
	>> I		>> I
	Page Up		Ch +
	Page Down		Ch -
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Repeat		Text
	Treble+		Shift + Ch +
	Treble-		Shift + Ch -
	Bass+		Shift + Right
	Bass-		Shift + Left
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue

