




 
 







 



 



 
 

 
 




 


 

 


 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Standby - On		Power
	TV / DVD		AV
	Edit		TV/R
	Select		Info
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Menu Disc		D. Menu
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Browser		Smart
	Tuner		Subt

 



Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	Rec Mode		Shift + Rec
	I<<		I<<
	>>I		>>I





Originalfernbedienung Ersatzfernbedienung




 

 







 

 

 

 
 
 



 



 
 


	Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv Vol-		Vol -
	Tv Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

 

 

 
 
 
 
 



 






Originalfernbedienung Ersatzfernbedienung

	Standby - On		Power
	TV / DVD		TV/R
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	OK		Ok
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Tuner		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Rec		Rec
	Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv Vol-		Vol -
	Tv Vol+		Vol +

