

 

 






 

 
 






 
 

 
 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Recall		Back
	Menu		Menu
	Exit		Exit
	Pg Up		Ch +
	Pg Dn		Ch -

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	TV/Radio		TV/R
	Info		Info
	FAV		Pre Ch
	Audio		Dual
	Sub-T		Subt
	TTX		Text
	EPG		Guide
	List		List
	Pause		Pause
	Sleep		Sleep





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Ratio		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

