












 

 


























 
 

 
 


 










 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0/Quick Access		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Home		Menu / Home
	*		Setup / OPT /
	Up		Up
	Left		Left
	Wheel Up		Shift + Up
	Right		Right
	OK		OK
	Wheel Down		Shift + Down
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-
	Netflix		Shift + Red / Netflix /
	Source		AV / Input / RDS
	Prime Video		Shift + Blue / Prime
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Blue Blue / Prime Video / Random
	Movies Display / Media
	Play Play / Slow
	Pause Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

