





 






 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	←PR		Back / Return
	EPG		Guide / EPG / -/--
	Up / PR+		Up
	Up / PR+		Shift + Up

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Left / Vol-		Shift + Left
	Left / Vol-		Left
	OK / List		OK
	OK / List		Shift + OK
	Right / Vol+		Shift + Right
	Right / Vol+		Right
	Info		Info / Angle
	Down / PR-		Shift + Down
	Down / PR-		Down
	Exit		Exit / Cancel / Clear
	Red / Audio		Shift + Red / Netflix /
	Red / Audio		Red / Netflix / Search
	Page+		CH+ / Page+
	Yellow / Subtitle		Shift + Yellow / YouTube /
	Yellow / Subtitle		Yellow / YouTube / Repeat
	Page-		CH- / Page-





**Originalfernbedienung**   **Ersatzfernbedienung**

	Green / TXT		Shift + Green / APP / REPEAT
	Green / TXT		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Blue / L/R		Blue / Prime Video / Random
	::		Text / Goto
	FAV		Fav / Marker / PC
	UHF		Setup / OPT /
	PAL / NTSC		D.Menu / Top
	Record		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold
	TV / AV		AV / Input / RDS
	<<		<< / Tune-
	>>		>> / Tune+
	< Seek		Shift + << /
	Seek >		Shift + >> /

**Originalfernbedienung**   **Ersatzfernbedienung**