 




Originalfernbedienung Ersatzfernbedienung


	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	EPG		Guide
	Timer		Shift + AV
	Text		Text
	M/P		Media

Originalfernbedienung Ersatzfernbedienung

	P-		<<
	P+		>>
	Recall		Pre Ch
	FAV		Shift + Pre Ch
	Menu		Menu
	Exit		Exit
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Vol+		Vol +
	Right		Right
	Vol-		Vol -
	Left		Left
	OK		Ok
	Info		Info
	Pause		Pause





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 TV/SAT	 AV		
 Red	 Red		
 TV/Radio	 TV/R		
 Green	 Green		
 Zoom	 Eject		
 Yellow	 Yellow		
 List	 List		
 Blue	 Blue		

