


 




 

 
 


 

 

 

 

 

 



 






Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Exit		Exit
	Display		Shift + Info
	TV/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Back		Back
	-/--		Shift + Guide

Originalfernbedienung    Ersatzfernbedienung
















 

 
	[≡?]		Smart
	[≡⇅]		Eject
	[ /≡]		Shift + Text
	[≡□]		Stop
	[≡●]		Media
	[≡i]		List
	[≡]		Text
	Menu 1		D. Menu
	Exit 1		Shift + Exit
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Pause		Pause
	PGUP		Shift + Ch +




**Originalfernbedienung Ersatzfernbedienung**

	PGDN		Shift + Ch -
	TV / Audio		TV/R
	Audio Setting		Options
	Text 1		Shift + Subt
	EPG		Guide
	Subtitle		Subt
	9 Picture		Shift + 9
	Sleep		Sleep
	I/II		Dual
	Mute		Mute
	Red / Enter		Red
	Green / P.Mode		Green
	Green / P.Mode		Format
	Yellow / ANA		Yellow
	Blue / S.Mode		Blue
	Blue / S.Mode		Shift + Dual
	Up / P+		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	Up / P+		Shift + Up
	Down / P-		Ch -
	Down / P-		Shift + Down
	Right / V+		Vol +
	Right / V+		Shift + Right
	Left / V-		Vol -
	Left / V-		Shift + Left
	Menu		Menu
	Menu		Shift + Ok

