




 
 
 










 





















 

 



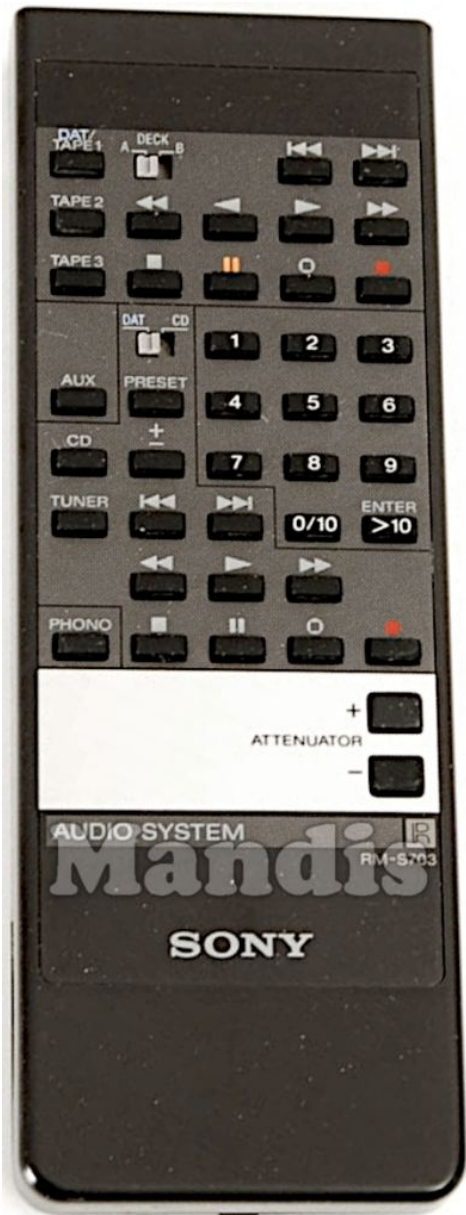
Originalfernbedienung Ersatzfernbedienung

	DAT/TAPE1		Shift + Red / Netflix /
	TAPE2		Shift + Green / APP /
	<< Deck A		Down
	<< Deck B		Shift + Down
	< Deck B		Shift + Left
	< Deck A		Left
	> Deck B		Shift + Right
	> Deck A		Right
	>> Deck B		Shift + Up
	>> Deck A		Up
	TAPE3		Shift + Yellow / YouTube /
	Stop Deck A		OK
	Stop Deck B		Shift + OK
	Pause Deck B		Shift + Pause / Step /
	Deck B Rec		Shift + Stop /
	Rec Deck A		Rec / Rec Mode
	Rec Deck B		Shift + Rec / Rec Mode




 


 





 


 



 




 
 






 

 

 
 

 



Originalfernbedienung Ersatzfernbedienung

	AUX		Yellow / YouTube / Repeat
	Tuner Preset +		Shift + >>I / Preset+
	Tuner Preset +		CH+ / Page+
	CD		Red / Netflix / Search
	Tuner Preset -		Shift + I<< / Preset-
	Tuner Preset -		CH- / Page-
	Tuner		Green / APP / Repeat
	1 Tuner		1
	2 Tuner		2
	3 Tuner		3
	4 Tuner		4
	5 Tuner		5
	6 Tuner		6
	7 Tuner		7
	8 Tuner		8
	9 Tuner		9
	0 Tuner		0







Originalfernbedienung Ersatzfernbedienung

	1 CD	 + 	Shift + 1
	2 CD	 + 	Shift + 2
	3 CD	 + 	Shift + 3
	4 CD	 + 	Shift + 4
	5 CD	 + 	Shift + 5
	6 CD	 + 	Shift + 6
	7 CD	 + 	Shift + 7
	8 CD	 + 	Shift + 8
	9 CD	 + 	Shift + 9
	10 CD	 + 	Shift + 0
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	CD Play		Play / Slow
	Phono		Blue / Prime Video / Random
	CD Stop		Stop / Hold
	CD Pause		Pause / Step / Freeze
	Attenuator +		Vol+

Originalfernbedienung Ersatzfernbedienung

	Attenuator -		Vol-

