






 

 

 


















 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Standby	 Power	 Book.J	 Shift + 3D
 Mute	 Mute	 R.Skip	 I<<
 1	 1	 REW	 <<
 2	 2	 FWD	 >>
 3	 3	 F.Skip	 >>I
 4	 4	 Rec	 Rec
 5	 5	 Stop	 Stop
 6	 6	 Play	 Play
 7	 7	 Pause	 Pause
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Info	 Info
 F.List	 Media	 Back	 Back
 RES	 Smart	 Up	 Up
 Repeat	 Text	 Left	 Left
 Capture	 Format	 OK	 Ok
 Book.M	 3D	 Right	 Right

 
 
 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Volume+		Vol +
	Volume-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red / Audio		Red
	Red / Audio		Dual
	Green / Subt		Green
	Green / Subt		Subt
	Yellow / Text		Yellow
	Yellow / Text		Shift + Text
	Blue / Sleep		Blue
	Blue / Sleep		Sleep
	EPG		Guide
	FAV		Pre Ch
	SAT List		List
	Zoom		Eject

Originalfernbedienung Ersatzfernbedienung

	Option1		Options
	Option2		Shift + Options
	TV / Radio		TV/R
	TV / STB		AV

