

 


 
 
 


 




 




 

 




 





 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide
	PRE-CH		Pre Ch
	TV		TV/R
	CH.MGR		Back
	Sleep		Sleep

 


 





 


 
 
 
 

 


 
 
Originalfernbedienung Ersatzfernbedienung

	PC		Media
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	[≡+]/PIP		3D
	[≡?]/Info		Info
	[≡]/[/≡]/TTX/MIX		Text
	Red-/I/I-/P.Mode		Red





Originalfernbedienung Ersatzfernbedienung

	Green/-I/I-/S. Mode e		Green
	Yellow/Still		Yellow
	Blue/P. Size		Blue
	[≡♦]/Source	 + 	Shift + AV
	[≡◇]/Swap		Options
	Size		Format
	I-II/Dual		Dual
	(o)/SRS		Subt
	[←]/Position		Smart
	P Up		>>
	P Down		<<

Originalfernbedienung Ersatzfernbedienung

