







































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	0		0
	←PR		Back / Return
	Menu		Menu / Home
	Info		Info / Angle
	Page Up		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-
	Page Down		CH- / Page-
	Up/PR+		Up
	Left		Left
	Vol-		Vol-
	OK/List		OK
	Right		Right
	Vol+		Vol+
	FAV		Fav / Marker / PC
	Down/PR-		Down
	Pause		Pause / Step / Freeze
	SAT		Shift + 0
	TV / AV		AV / Input / RDS
	UHF		Smart / List
	PAL/NTSC		Picture / Format
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

AUDIO 	Red	 NETFLIX SEARCH	Red / Netflix / Search
POSITION 	Green / Position	 APP REPEAT	Green / APP / Repeat
	[...]	 EQ SUBTITLE	Subtitle / EQ
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue/Audio L/R	 Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

