




 



 

 

 

 











 








 


 






 







 
 

 

 

 



 






**Originalfernbedienung    Ersatzfernbedienung**

	Power DVD		Power
	Direct Tv Rec		TV/R
	Drive Select HDD		Media
	Drive Select DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	* Cancel		Guide
	Input Select		AV
	CH+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		Ch -
	ShowView		Blue
	Manual Skip		Subt
	⏮ Skip		I<<
	Skip ⏭		>>I
	◀ Slow/Search		<<
	Slow/Search ▶		>>
	■ Stop		Stop
	⏸ Pause		Pause
	▶ Play/x1.3		Play
	Direct Navigator/Top		Menu
	Functions		Options
	Sub Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right / ⏭		Right





**Originalfernbedienung   Ersatzfernbedienung**

	Left /		Left
	Enter		Ok
	Prog/Check		Sleep
	Display		Info
	Status		3D
	Time Slip		Format
	Timer		Shift + AV
	Erase		Exit
	Rec Mode		Shift + Rec
	Rec		Rec
	(A) Ext Link		Red
	(B) Dubbing		Green
	(C) Create Chapter		Yellow
	Audio		Dual
	Power Tv		Shift + Power
	AV Tv		Eject
	CH+ Tv		Shift + Ch +

**Originalfernbedienung   Ersatzfernbedienung**

	CH- Tv		Shift + Ch -
	Volume+ Tv		Vol +
	Volume- Tv		Vol -

