


 



 
 
 





 



 




 

 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Display		Info
	Source		AV
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	S.Mode	 + 	Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Audio I/II		Dual
	P.Mode	 + 	Shift + Format
	Auto		Smart
	Sleep		Sleep
	Aspect		Format
	Red / Eject		Red

 

 






 

 



 


 


 
 
 




Originalfernbedienung Ersatzfernbedienung

	Red / Eject		Eject
	Green / D.Menu		Green
	Green / D.Menu		D. Menu
	Yellow / Setup		Yellow
	Yellow / Setup		Options
	Blue / D.Disp		Blue
	Blue / D.Disp		List
	Play/Pause / Text		Text
	Play/Pause / Text		Play
	Play/Pause / Text		Pause
	Stop / Index		Stop
	A-B / MIX		Shift + TV/R
	Repeat / Reveal		Shift + Text
	<< / Hold		Shift + Stop
	<< / Hold		<<
	>> / Subpage		>>
	>> / Subpage		Shift + Subt

Originalfernbedienung Ersatzfernbedienung

	I<< / Size		I<<
	I<< / Size		Shift + Eject
	>>I / Cancel		>>I
	>>I / Cancel		Shift + Exit
	Time Shift		Media
	Rec		Rec
	FAV-		Shift + Left
	FAV+		Shift + Right
	EPG		Guide
	FAV		Pre Ch
	Subtitle		Subt
	TV / Radio		TV/R

