


 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Back		Back
	Nicam		D. Menu
	Aspect		Format
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	DTV		Smart
	Source		AV
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Freeze		Shift + Pause
	Media		Media
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	P.Mode		Shift + Format

 









Originalfernbedienung Ersatzfernbedienung

	S.Mode	 + 	Shift + Dual
	Play/Pause		Play
	Stop		Stop
	Play/Pause		Pause
	<< / Index		<<
	>> / Size		>>
	I<< / Reveal		I<<
	>>I / Subpage		>>I
	Text		Text
	Hold	 + 	Shift + Stop
	EPG		Guide
	Subtitle		Subt
	Info		Info
	FAV		Pre Ch
	Audio		Dual
	TV / Radio		TV/R
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Cyan		Blue

