



Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	POWER		Power
	Freeze		Mode
	MENU / EXIT		Menu
	AUTO		Auto
	UP / KEYSTONE		Up
	DOWN / KEYST.		Down
	LEFT		Left
	ENTER / MODE		Enter
	RIGHT / LOCK		Right
	Blank		Blank / Mute
	SOURCE		Source
	VOLUME+		Vol + / Page +
	VOLUME-		Vol - / Page -
	Magnify +		+ / Play
	Magnify -		- / Stop
	TIMER ON		Freeze / Timer
	TIMER SET UP		Shift + Freeze / Timer

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

