
 


 

 





 





 


 

 

 
 

 

















Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		AV
	TUNER		7
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET	 + 	Shift + Media
	NET		0
	USB		Media
	USB		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I


 





 






Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	Pause / Play Rev.		Pause
	Stop		Stop
	Movie / TV		Red
	Music		Green
	Game		Yellow
	Thx		Blue
	Dimmer		Dual
	D.TUN		TV/R
	Sleep		Sleep
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5




 

 





 

 






 



Originalfernbedienung Ersatzfernbedienung

	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0

 



 








 
 
 
 

 



 




 










Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		AV
	TUNER		7
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET		Shift + Media
	NET		0
	USB		Media
	USB		Pre Ch
	Muting		Mute


 









 






 

 







 


 
 


 





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+ / Album+		Ch +
	CH- / Album-		Ch -
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Page- / Playlist-		Left
	Enter		Ok
	Page+ / Playlist+		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I
	<<		<<










 


 



 
 





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	Pause / Play Rev.		Pause
	Stop		Stop
	Search		TV/R
	Search		Red
	Repeat		Green
	Repeat		Text
	Random		Yellow
	Mode		Blue
	Mode	 + 	Shift + Play
	1	 + 	Shift + 1
	2	 + 	Shift + 2
	3	 + 	Shift + 3
	4	 + 	Shift + 4
	5	 + 	Shift + 5
	6	 + 	Shift + 6

Originalfernbedienung Ersatzfernbedienung

	7	 + 	Shift + 7
	8	 + 	Shift + 8
	9	 + 	Shift + 9
	0	 + 	Shift + 0
	--/-- +10	 + 	Shift + Guide
	Sleep		Sleep
	Display		Info
	CLR		Exit





 





 




 

 
 

 

















Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		7
	TV / CD		8
	PHONO		9
	TUNER		AV
	PORT		Guide
	NET		0
	NET		Shift + Media
	USB		Pre Ch
	USB		Media

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout		Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I













Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Movie / TV		Red
	Music		Green
	Game		Yellow
	Thx		Blue
	Dimmer		Dual
	D.TUN		TV/R
	Sleep		Sleep
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0








 






 
 
 

 
 

 
 

 
 
 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	BD / DVD		1
	VCR / DVR		2
	CBL / SAT		3
	GAME		4
	PC		5
	AUX		6
	TUNER		7
	TUNER		AV
	TV / CD		8
	PHONO		9
	PORT		Guide
	NET		0
	NET		Shift + Media
	USB		Pre Ch
	USB		Media

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	CH+		Ch +
	CH-		Ch -
	SP Layout		Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Return		Back
	I<<		I<<
	>>I		>>I

 






Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Movie / TV		Red
	Music		Green
	Game		Yellow
	Thx		Blue
	Dimmer		Dual
	D.TUN		TV/R
	Sleep		Sleep
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0

