



Originalfernbedienung Ersatzfernbedienung

	Radio		TV/Radio /
	Power		Power
	Input		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	0		0
	i		Info / Angle
	Photo		Display / Media
	Guide		Guide / EPG / -/--
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	List		Smart / List





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Photo		Display / Media
	Guide		Guide / EPG / -/--
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	List		Smart / List
	P-		CH- / Page-



