



 
 

 






 










 


 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------|
|  | POWER |  | Power |
|  | MUTE |  | Mute |
|  | DISP |  | Shift + Info |
|  | AUDIO |  | Dual |
|  | Tv/Radio |  | TV/R |
|  | SLEEP |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | EPG |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------------|
|  | USB |  | AV |
|  | MENU |  | Menu |
|  | EXIT |  | Exit |
|  | UP |  | Up |
|  | DOWN |  | Down |
|  | RIGHT |  | Right |
|  | LEFT |  | Left |
|  | OK |  | Ok |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | VOL+ |  | Vol + |
|  | VOL- |  | Vol - |
|  | P↑ |  | Shift + Ch + |
|  | P↓ |  | Shift + Ch - |
|  | INFO |  | Info |
|  | BACK |  | Back |
|  | ZOOM |  | Eject |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | RED / FIND | | Red |
| | GREEN | | Green |
| | YELLOW / MARK | | Yellow |
| | BLUE / JUMP | | Blue |
| | FAV / A - B | | Pre Ch |
| | SUB / SWP | | Subt |
| | DVR | | Media |
| | TXT | | Text |
| | SKIP PREV | | I<< |
| | SKIP NEXT | | >>I |
| | REW | | << |
| | FWD | | >> |
| | PAUSE | | Pause |
| | REC | | Rec |
| | PLAY | | Play |
| | STOP | | Stop |
| | | | |
| | | | |

