



 

 


 

 

 



 

 

 





 







 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	SD		Smart
	[ + ]		Info
	Tv/AV		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/Text		Text
	F.P.		Eject

**Originalfernbedienung Ersatzfernbedienung**

	Index		List
	Hold		Options
	N		Media
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





**Originalfernbedienung    Ersatzfernbedienung**
















 
 
 
	0		0
	-/--		Guide
	C		Pre Ch
	Aspect		3D
	(↔)		Format
	Multiwindow		D. Menu
	Direct Tv Rec		TV/R
	Power VCR		Shift + Power
	Rec VCR		Rec
	Programme Up		Shift + Ch +
	Programme Down		Shift + Ch -
<< VCR button" data-bbox="228 695 261 728"/>	<< VCR		<<
	>> VCR		>>
	Stop VCR		Stop
	Pause/Step VCR		Pause
	Play VCR		Play

**Originalfernbedienung    Ersatzfernbedienung**






Originalfernbedienung   Ersatzfernbedienung

	Power DVD		Power
	Rec DVD		Rec
	Programme Up		Ch +
	Programme Down		Ch -
	<< DVD		<<
	>> DVD		>>
	Stop DVD		Stop
	Pause/Step DVD		Pause
	Play DVD		Play

Originalfernbedienung   Ersatzfernbedienung