 




 








 
 


 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV / AV		AV
	Menu		Menu
	Sleep		Sleep
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	APC		I<<<
	ASC		<<<
	ARC		>>>
	PIP		Smart
	Review		Info
	MTS		Dual
	Multi PIP		Format
	Multimedia		Media
	Red / PIP CH+		Red
	Green / PIP CH-		Green





Originalfernbedienung	Ersatzfernbedienung
 Yellow / PIP SWAP	 Yellow
 Blue / PIP Input	 Blue
 Text	 Text
 Mode	 Options
 Size / PIP Size	 Eject
 Mix	 TV/R
 Sub Page	 Subt
 Index	 Shift + Info
 Reveal	 D. Menu
 Hold / PIP Still	 Stop
 Update / PIP Position	 Guide

Originalfernbedienung	Ersatzfernbedienung

