

 
 
 

 
 
 

 
 







 

 

 

 


 
 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 / ATK |  | 0 |
|  | C-Reset |  | Pre Ch |
|  | C-0 Stop |  | Guide |
|  | Red / Clear |  | Red |
|  | Red / Clear |  | Exit |
|  | Green / Sleep |  | Green |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|--------|
|  | Green / Sleep |  | Sleep |
|  | Yellow / Input |  | Yellow |
|  | Yellow / Input |  | AV |
|  | Blue / Normal |  | Blue |
|  | Index- / [≡□] |  | I<< |
|  | Index+ / [≡□] |  | >>I |
|  | Up / PR/TRK+ / Page+ |  | Up |
|  | Up / PR/TRK+ / Page+ |  | Ch + |
|  | Down / PR/TRK- / Page- |  | Down |
|  | Down / PR/TRK- / Page- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | Menu |  | Menu |
|  | Menu |  | Ok |
|  | Rec / OTR |  | Rec |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|-------|
| | Recall / [=/?] | | Back |
| | Pause | | Pause |
| | Stop | | Stop |
| | [=] | | Text |
| | << / [=/?] | | << |
| | >> / [=/?] | | >> |
| | Play / [=/?] | | Play |
| | SV/V+ / [=X] | | Smart |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

