
 
 




 
 

 
 

 



 



 
 


 

 


 

 




 
 


 
 
 

 


 
 



 





 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 List	Menu Off	 Exit
Reveal	 +  Shift + List	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
On/Tim		Options
Mix Scan		Play
Bright+ Mode		>>I
Green		Green
Rotate Text		>>
Audio+		3D
Disp		Format
Yellow		Yellow
Bright- Sys		I<<
Blue		Blue
Color+ P.Std	 + 	Shift + Format

Originalfernbedienung Ersatzfernbedienung

Store Text	 + 	Shift + Text
Search	 + 	Shift + TV/R
Tone+	 + 	Shift + Up
Store		Smart
Browse		Media
Tune-	 + 	Shift + Left
Color- S.Std	 + 	Shift + Dual
Aft/Caf	 + 	Shift + Ok
Tone-	 + 	Shift + Down
Tune+	 + 	Shift + Right
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
3.*	 + 	Shift + Guide
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Level R/Woofer	 + 	Shift + Blue

