


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	MAFF		Red
	Eject		Eject
	Setup		Options
	Clear		Exit
	Memory		Pre Ch
	Goto / Search		TV/R
	Repeat A-B		D. Menu
	Repeat 1/All		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Function		Smart
	Band		Media
	Up		Up
	Left		Left
	Play / Enter		Ok
	Right		Right
	Down		Down
	EQ		Green
	AMP		Yellow
	Slow		Shift + Pause
	Stop		Stop
	Pause / Step		Pause
	Play / Enter		Play
	Prev. / Preset-		I<<
	Next / Preset+		>>I





Originalfernbedienung Ersatzfernbedienung

	F.Bwd / Tuning-		<<
	F.Fwd / Tuning+		>>
	Zoom	 + 	Shift + Eject
	Info	 	Info
	TV Sys.	 	Format
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	PBC		Blue
	Menu	 	Menu
	Title	 	AV
	Subtitle	 	Subt
	Angle	 	3D
	Audio	 	Dual

Originalfernbedienung Ersatzfernbedienung

