
 
 







 
 





 



 

 

 

 
 









| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|--|-----------------------|---|
| PWR On/Off |  Power | Exit |  Exit |
| Mute |  Mute | Menu Down |  Down |
| Epg |  +  Shift + Guide | Volume+ |  Vol + |
| Info |  Info | CH/Page+ |  Ch + |
| App |  Media | Audio |  Dual |
| Subt.List |  Subt | Volume- |  Vol - |
| TV |  TV/R | CH/Page- |  Ch - |
| Video |  D. Menu | 1. ? |  1 |
| Text |  Text | 2abc |  2 |
| Zoom |  Eject | 3def |  3 |
| TV/SAT |  AV | 4ghi |  4 |
| Menu |  Menu | 5jkl |  5 |
| Menu Up |  Up | 6mno |  6 |
| Display |  +  Shift + Info | 7pqrm |  7 |
| Menu Left |  Left | 8tuv |  8 |
| OK Enter |  Ok | 9wxyz |  9 |
| Menu Right |  Right | Guide Pilote |  Guide |



| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| 0/10 |  | | 0 |
| FAV Pref. |  | | Pre Ch |
| Red |  | | Red |
| Green |  | | Green |
| Yellow |  | | Yellow |
| Blue |  | | Blue |
| SAT Sky |  | | Smart |
| |  | | Shift + Ch + |
| |  | | Shift + Ch - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

