



 

 

 
 


 

 
 
 
 
 

 

















Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Stand-By		Shift + Power
	Text		Text
	Subtitle		Subt
	Audio		Dual
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/Rad		TV/R

Originalfernbedienung    Ersatzfernbedienung

	Sleep		Sleep
	Guide		Guide
	Info		Info
	Recall		Back
	Aspect		Shift + Format
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Left / Vol-		Left
	OK		Ok
	Right / Vol+		Right
	Down / CH-		Down
	Vol+		Vol +
	Vol-		Vol -
	File List		Media
	Group		Smart
	Page+		Ch +



