










 

 

 

 

 

 

 




 

 
 



 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Display		Info
	Return		Back
	DVD Menu		Menu
	Title		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Pause/Step		Pause
	Stop		Stop
	I<< Skip		I<<
	Scan >>		>>
	Play		Play
	Skip >>I		>>I

Originalfernbedienung Ersatzfernbedienung

	<< Scan		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Clear		Exit
	Audio		Dual
	Subtitle		Subt
	Angle		List
	Setup		Options





Originalfernbedienung Ersatzfernbedienung

REPEAT	Repeat	REPEAT TEXT	Text
RANDOM	Random	PICTURE FORMAT	Format
A-B	A-B	ECO 3D	3D
MARKER	Marker	APP MEDIA	Media
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
SEARCH	Search	SEARCH TV/R	TV/R

Originalfernbedienung Ersatzfernbedienung

