
 

 



 

 


 

 
 
 



 








 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | System Power |  | Power |
|  | Sleep |  | Sleep |
|  | Disc Skip |  | Shift + Smart |
|  | CD |  | Yellow |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Tape |  | Green |
|  | Shift |  | Menu |
|  | Select 10 |  | Info |
|  | P.File |  | Ch + |
|  | Tuner |  | Blue |
|  | Phono |  | Red |
|  | 1 |  | 1 |
|  | 2 |  | 2 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | 0 |
|  | 11 |  | Guide |
|  | 12 |  | Pre Ch |
|  | 13 |  | AV |
|  | 14 |  | Format |
|  | 15 |  | 3D |
|  | 16 |  | Back |
|  | Video 1 |  | Smart |
|  | Video 2 |  | Media |
|  | Video 3 |  | Shift + Media |



