




 

 



 











 

 



 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV
	Mute		Mute
	PIP		Smart
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / Freeze		Blue
	Mosaic		Media
	Recall		Back
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / V+		Right
	Right / V+		Vol +
	Left / V-		Left
	Left / V-		Vol -
	Menu		Menu
	OK		Ok
	16:9		Format
	Text		Text
	Text Mix		Shift + Text
	Text Subpage		Subt





**Originalfernbedienung**    **Ersatzfernbedienung**

	Text Index		Info
	PP		Pre Ch
	Text Hold		Stop
	Text Size / Zoom		Eject
	Text Cancel		Exit
	Text Reveal		Options
	S/M/D		Dual

**Originalfernbedienung**    **Ersatzfernbedienung**