




 













 

 







 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	CH List		List
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	[≡]		Menu
	Play		Play
	Pause		Pause
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Subtitle		Subt				
	Info		Info				
	TXT		Text				
	Music		3D				
	Free		Options				
	ART		Dual				
	Netflix		Shift + Media				
	Prime Video		Format				
	YouTube		Shift + Smart				
	Rakuten TV		TV/R				
	Media		Media				
	[++]		D. Menu				

