 












 








| Originalfernbedienung  | Ersatzfernbedienung   |
|--|---|
|  On/Standby           |  Power           |
|  Standard             |  Red             |
|  Cinema/Game          |  Green           |
|  Sport                |  Yellow          |
|  News                 |  Blue            |
|  Volume+              |  Vol +           |
|  Volume-              |  Vol -           |
|  Mute                 |  Mute            |
|  Subwoofer Level Up   |  Ch +            |
|  Subwoofer Level Down |  Ch -            |
|  Bass/Treble          |  Dual            |
|  Dimmer              |  Media          |
|  Line               |  Info          |
|  On/Standby Tv      |  Shift + Power |
|  Input Tv           |  AV            |
|  Channel Up Tv      |  Shift + Ch +  |
|  Channel Down       |  Shift + Ch -  |

| Originalfernbedienung  | Ersatzfernbedienung   |
|--|---|
|  Volume+ Tv |  Shift + Vol + |
|  Volume- Tv |  Shift + Vol - |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |



Tv