 




 









 

 



 








 



 






Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject
	Pure Direct		Smart
	CD/USB		Media
	Dimmer		TV/R
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Repeat		Text
	Program		Sleep
	Random		3D
	A/B		Guide
	<<		<<
	>>		>>
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Play		Play

