



















 
 




 
 

 












 
 
 
 

 

 
 



 




 


 
 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | Power |  | Power |
|  | TV |  | TV/R |
|  | Source |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | List |  | List |
|  | YouTube |  | Shift + Media |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------|
|  | Mute |  | Mute |
|  | [i] |  | Info |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Netflix |  | Media |
|  | Home |  | Smart |
|  | * |  | Menu |
|  | Back |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Exit |  | Exit |
|  | EPG |  | Guide |
|  | Zoom |  | Eject |
|  | ≡ |  | Options |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------|
|  | Sleep |  | Sleep |
|  | PRE-CH |  | Pre Ch |
|  | FAV |  | Shift + Pre Ch |
|  | Rec |  | Rec |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Lang |  | Dual |
|  | Subtitle |  | Subt |
|  | Text |  | Text |
|  | I< |  | I<< |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | >I |  | >>I |
|  | << |  | << |
|  | Pause |  | Pause |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----|---|----|
|  | >> |  | >> |
|---|----|---|----|

