













 

 

 

 

 

 

 

 

 







 

 















 




 




 


Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0

Originalfernbedienung	Ersatzfernbedienung
	 Guide
	 Pre Ch
	 Shift + Guide
	 Shift + Pre Ch
	 Red
	 Green
	 Up
	 Yellow
	 Blue
	 Format
	 Left
	 Shift + Green
	 Shift + Yellow
	 Right
	 Text
	 Info
	 Down



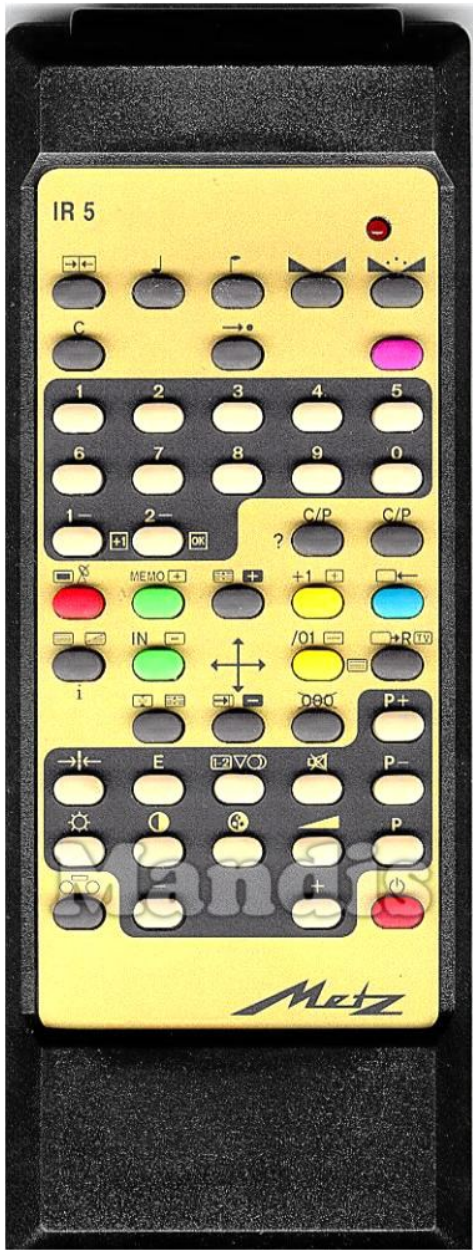

Originalfernbedienung	Ersatzfernbedienung
	 Shift + 0
	 Ch +
	 Ch -
	 Smart
	 Shift + Exit
	 Dual
	 Exit
	 Mute
	 I<<
	<< button" data-bbox="365 545 395 580"/>
	
	 Subt
	 Vol +
	 Vol -

Originalfernbedienung	Ersatzfernbedienung

